Section 2

List of Contents

1 Connection Diagrams of the Preview- and ID Station 1
1.1 ID – Tablet 1
1.2 PC of the ID – Station 2
1.3 PC of the Preview Station 2
2 Connection Diagram of SUN ULTRA 1 3
3 Connection Diagram of SUN ULTRA 10 4

1 Connection Diagrams of the Preview- and ID Station

1.1 ID – Tablet

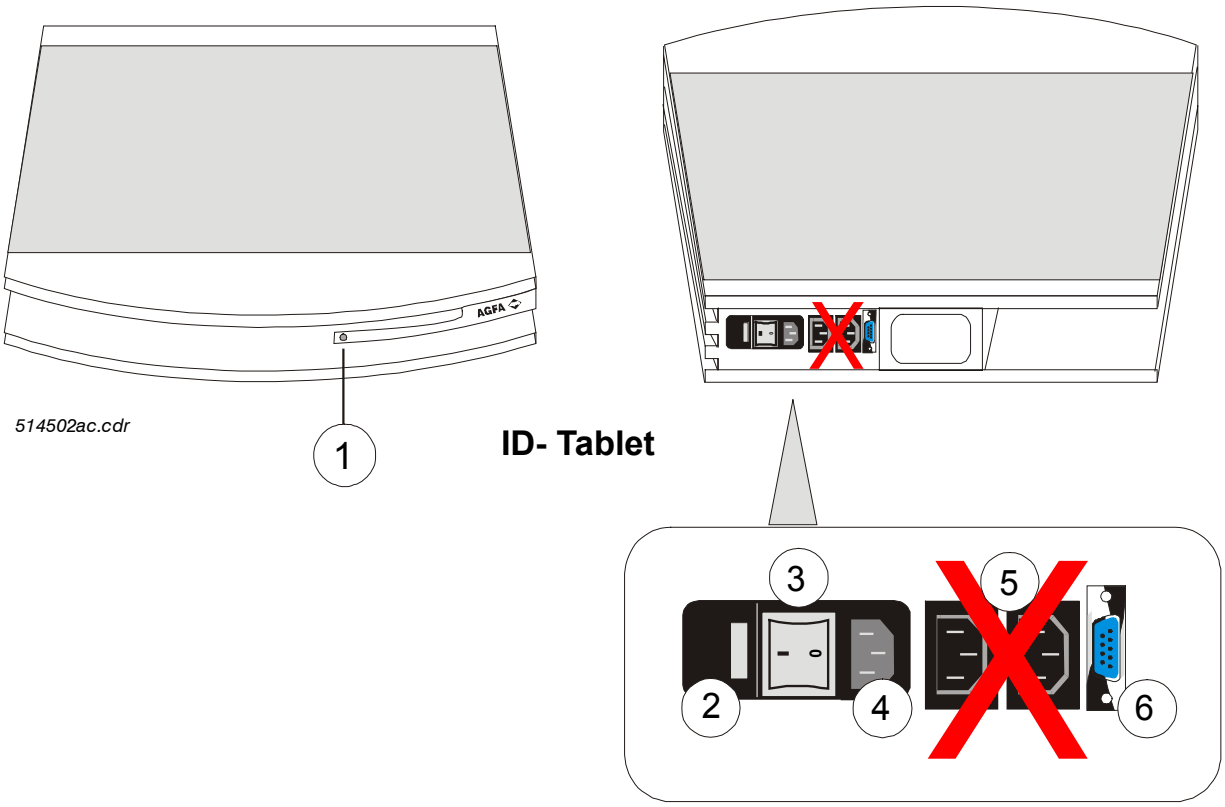

1	Indicator for ID – Tablet "POWER PRESENT / RESET"
2	Fuse holder (2 x 5A)
3	Main switch ID - Station
4	Line input for the ID - Tablet
5	Two standard outlets (not to be used)
6	Interface to the PC (RS232 – 15-pin D connector, male) - Connection to COM1 (default)

1.2 PC of the ID – Station

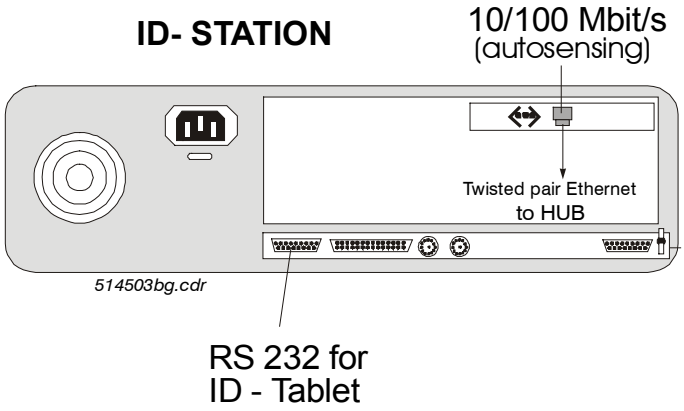

For commercially PC please refer to the corresponding PC user manual!

1.3 PC of the Preview Station

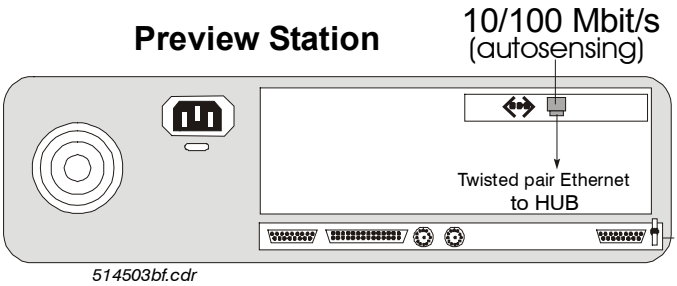

For commercially PC please refer to the corresponding PC user manual!

2 Connection Diagram of SUN ULTRA 1

SUN ULTRA 1, delivered by AGFA

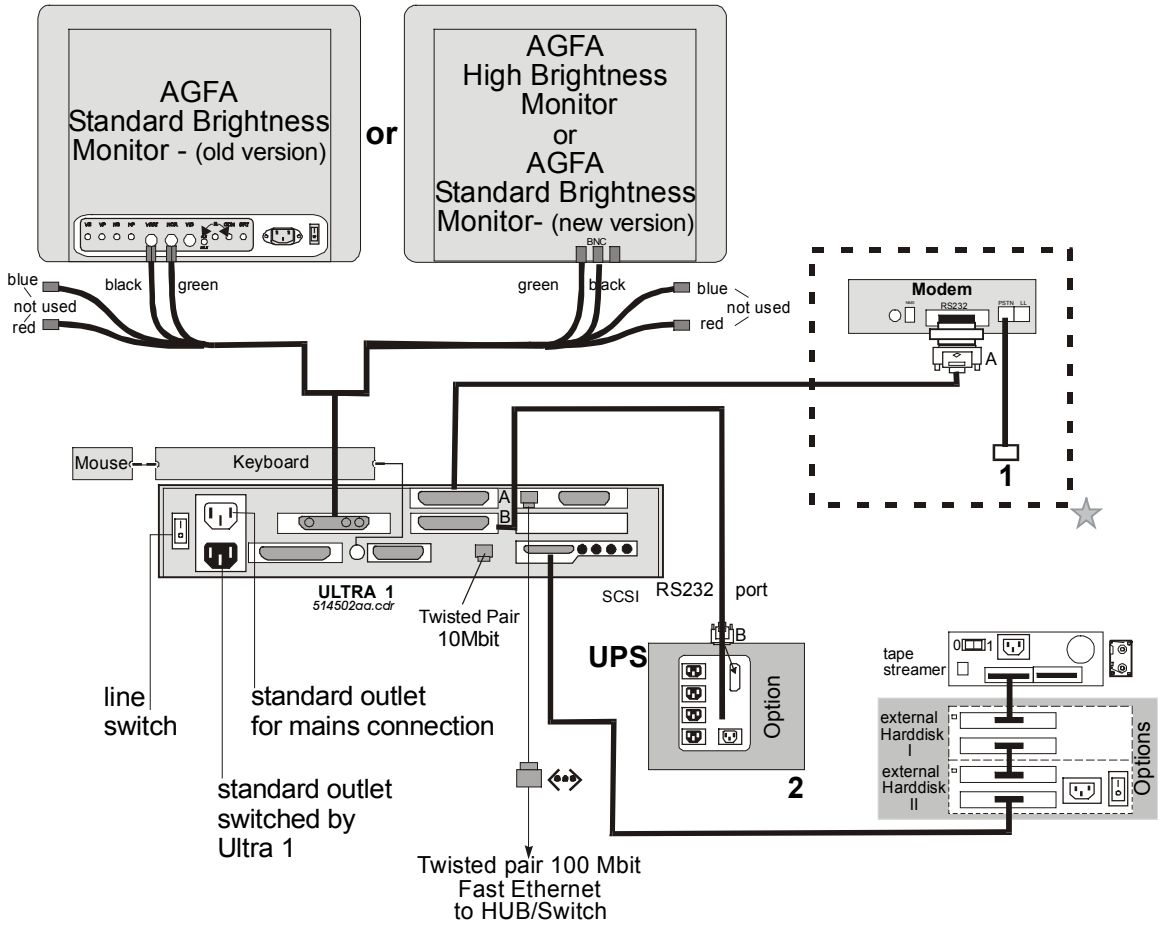

Figure 1

1 optional telephone connector for modem.

The modem should always be directly accessible from the outside.

☆ Since the first quarter of 1999 modems are no longer available from AGFA. For remote access a Service Host PC can be ordered and used instead.

2 UPS (Uninterruptable Power Supply, optional); the outlets of Processing Station, monitor, optional external hard disk and tape streamer are connected to UPS; UPS is connected to the mains connector.

3 Connection Diagram of SUN ULTRA 10

SUN ULTRA 10, delivered by AGFA

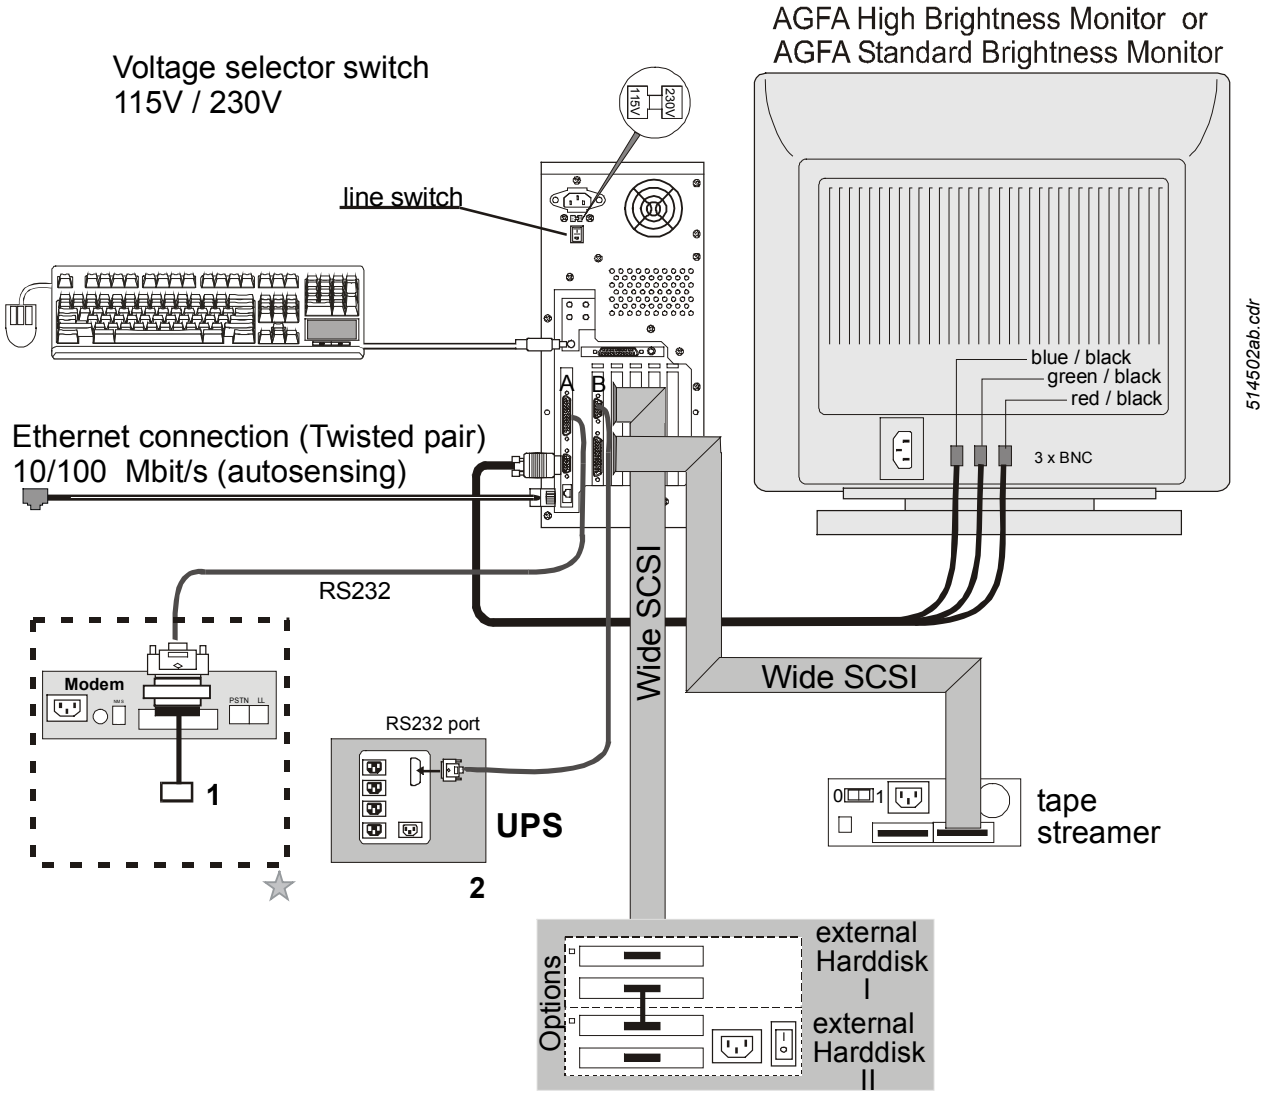

Figure 2

1 optional telephone connector for modem.

The modem should always be directly accessible from the outside.

☆ Since the first quarter of 1999 modems are no longer available from AGFA. For remote access a Service Host PC can be ordered and used instead.

2 UPS (Uninterruptable Power Supply, optional); the outlets of Processing Station, monitor, optional external hard disk and tape streamer are connected to UPS; UPS is connected to the mains connector.